

PCTx Instructions

Endurance R/C
www.endurance-rc.com

Setting up your system

After plugging the PCTx into your system Windows will recognize the device and automatically find the correct driver. You can verify this by going into the device manager and expanding the Human Interface Device section. Here you will see an HID Device and a Human Interface Device appear when you connect the controller.

To view the device manager right click on 'My Computer' and choose properties. Click on the Hardware tab and then on the Device Manager button.

Software

Sample software requires no installation; just download the .exe and run.

*****Important note about sample software and the PCTx*****

The PCTx was designed with flexibility in mind. Values can be sent above and below manufacturer limits. If you are designing your own software, please do adequate testing to determine the limits of your system.

Connections

Connect the PCTx to your radio via the buddy/trainer port. In order to enable transmitter trainer functions you must flip and hold the trainer switch. Many transmitters use a switch that springs back when released. One solution is to replace the switch with a toggle switch that stays in place. Another option is a rubber band. Removing the switch all together will permanently enable the trainer.

Problems

If the software crashes or windows disconnects, unplug and reinsert the PCTx and restart any running PCTx software.

**This device has been tested on Windows XP*